

## FIRECHIEF AUTOMATIC POWDER EXTINGUISHERS

APS1 (100-1004), APS2 (100-1008), APS6 (100-1010), APS10 (100-1006), APS12  
(100-1007), APS1/S (100-1588), APS2/S (100-1589)

### VISUAL INSPECTION:

The user should regularly check the pressure gauge at least every 6 months to ensure the needle remains in the GREEN portion of the gauge. The unit should also be checked for any obvious signs of corrosion or damage to the body and valve.

### INSPECTION & MAINTENANCE:

This Automatic Fire Extinguisher should be inspected and serviced at least once a year by a COMPETENT PERSON in line with local regulations. Service checks should include:

1. Checking the pressure remains in the green
2. Checking for any signs of damage, corrosion or leakage
3. Remove cover label from hole on gauge face and verify that the pressure gauge needle operates freely. Use a gauge testing device as required. Replace a gauge dot label over the hole.
4. Ensure that all labels and wording on the extinguisher is clear and legible.
5. Complete the Service Label as necessary.

If the pressure is in the red, if the unit is damaged, corroded, has leaked or the gauge needle does not move freely the unit to be removed and replaced.

**DO NOT** attempt to test the operation of the unit.

**For more information contact:** Firechief Global, 3 Lands End Way, Oakham, Rutland, UK, LE15 6RB | UK: 0330 999 0019 |  
International: +44 (0) 1572 772657 | **Imported into EU by:** Sentura Group (Ireland) Ltd, Joyce House, 21-23 Holles Street, Dublin 2, Ireland



+44 (0) 330 999 0019



sales@firechiefglobal.com



firechiefglobal.com